



AT6400 AllTouch IR Universal Remote Control

User Guide

Welcome to the Ultimate Control Experience

Your new AT6400 AllTouch® Infrared (IR) Universal Remote Control (remote) is a true universal remote, functioning as four remotes in one. As one example, you can use this remote to operate your set-top, your TV, and two other devices, such as a DVD player and VCR.

Important Information About Your Remote

Your remote is initially programmed to only operate your set-top. Therefore, you must program the remote to operate your TV, VCR, or other devices. See **Program the Remote to Control My Devices** to learn how to enter device codes and program your remote.

Note: You must use the IR remote within line of sight of the set-top to operate the set-top correctly.

How Does A Universal Remote Control Work?

You tell the remote which type of device you want to operate using the four keys arched across the top of the remote. These keys, known as **mode keys**, are labeled **STB**, **TV**, **DVD**, and **AUX**. Each mode key is associated with a specific device. As an example, after programming the remote, if you want the remote to operate your TV, you simply press the TV key. Other keys you press on the remote, thereafter, should operate your TV. Want to switch the remote to operate a different device? Just press the mode key for the next device you want to operate. In this guide, you will learn which types of devices you can control and how to program the remote to control your specific devices.

Where Do I Start?

Before you begin using your remote, complete the following initial setup tasks.

Install the Batteries

The remote requires two AA batteries (alkaline recommended). A diagram in the battery compartment of the remote indicates proper placement of the batteries. When batteries are properly installed, the light on the remote blinks each time a key is pressed.

Visit the Quick Reference Section

Use the Quick Reference section of this guide to familiarize yourself with the remote and the functions of its various keys. Knowing the function and location of the keys on the remote will assist you when you are programming the remote.

Program the Remote

To learn how to program your remote, refer to the sections **What Devices Can I Control**, **What Devices Do I Want to Control**, and **Program the Remote to Control My Devices** for further instructions.

Find a Place to Store Your Remote

Keeping up with one remote is much easier than keeping up with four or five remotes. However, it is still a good idea to find a storage location for your remote. The AT6400 is not a toy. It should be kept out of the reach of children under the age of 6 years.

Program the Remote to Control My Devices

Your remote is initially programmed to only operate your set-top. You will need to set up the remote to operate your other devices using its TV, DVD, and AUX modes. The TV key may be programmed to operate a standard or high-definition television (HDTV). The DVD key may be programmed to operate a DVD player. The AUX key may be programmed to operate a VCR, a receiver, an amplifier, or a Home Theater in a Box (HTIB) system. If the remote provides only limited functionality for a device, you can look for a code that provides more functionality.

Refer to the code tables at the end of this guide to locate additional programming codes.

Note: You have the option to assign some remote keys to operate one device type only. For example, you may want to assign volume control to the TV only. If this is the case, you can reprogram power, volume, and channel control using procedures found later in this guide.

Assigning a Device Code to a Mode Key

1. Refer to the code tables at the end of this guide to locate the information for the device you want to program.

Note: If your device is not listed, you may be able to program the remote using the Auto-Search function. Go to **What if None of the Codes Work** for instructions.

2. Turn on the device that you want to assign to a mode key.

3. Press and hold the appropriate mode key (**TV**, **DVD**, or **AUX**) on the remote, and then press and hold the **OK** key.

4. Release *both* keys and the mode keys blink twice.

5. Enter the first 4-digit setup code for the device using the numeric keys (0-9) on the remote. The mode key blinks three times to indicate that the code entry was accepted.

Notes:

- When an invalid code is entered, the selected mode key displays a long flash to indicate that you have not entered the code correctly.
- Should the remote time-out before you complete the code setup, you must start over. This is indicated by one long flash of the red LED.

6. Point the remote at the device, and press **POWER** to test the device.

7. Did the device power off?

- If **yes**, write this code number in the table found in this guide. You may need it again if the device code is accidentally erased.
- If **no**, repeat this procedure from step 3 using a different setup code.

Note: If none of the codes listed for your brand of device operate the device correctly, go to **What if None of the Codes Work** for instructions.

8. Repeat this procedure for each mode key you want to program.

What If None of the Codes Work?

If none of the codes listed for your brand of device operate the device correctly, or if your device is not listed in the codes table, you can use the Auto-Search function to search through the code library for a valid code. This section provides procedures for using the Auto-Search function to search the code library for TV, DVD and AUX mode codes.

Note: Read the procedures in this section thoroughly before beginning. You need to be prepared to observe the behavior of the remote.

Auto-Search Features

Consider the following items when using Auto-Search:

- The Auto-Search function begins searching from the first code.
- If a valid code is not found, the green backlight blinks twice and the remote returns to normal operation.
- If any other key is pressed except **PLAY**, **ENTER**, **POWER**, **EXIT**, **REW**, **FF**, or numeric keys 1 through 4 (when programming the **AUX** mode key), the mode key displays a long red flash (error message) and the remote returns to normal operation.
- Should the remote time-out before you complete the Auto-Search function you must start over. This is indicated by one long flash of the red LED.
- If the device is not listed and the Auto-Search function is unable to find a usable code, you may need to use the original remote provided with the device.

Auto-Searching the Code Library for TV or DVD Mode Codes (Program Code 922)

Note: This procedure only applies to TVs and DVDs.

- Turn on the device you that you want to assign to the TV or DVD key.
- Point the remote at the device.
- Press and *while holding* a selected mode key (**TV** or **DVD**), press the **OK** key. For example, to search for a TV code, press and hold **TV** and **OK** at the same time.
- Release *both* keys and all the mode keys blink twice.

5. Enter the programming code **9 2 2** by pressing the numeric keys on the remote. The mode key you selected in step 3 blinks twice to indicate a successful entry.

6. Point the remote toward the device, and press **PLAY**.

7. Your device powers off when it finds the correct code. Then, choose one of the following options:

- Save code and exit** – Press the **ENTER** key on the remote to program the code in the remote and the mode key flashes three times indicating successful entry.
- Step forward** – Press the fast-forward (**FF**) key on the remote to step ahead through the codes one at a time. Then, return to step 6.
- Step backward** – Press the rewind (**REW**) key on the remote to step back through the codes one at a time. Then, return to step 6.
- Exit without saving the code** – Press the **EXIT** key on the remote. The selected mode key flashes three times and returns to normal operation.
- Send the current code** – Press the **POWER** key on the remote to send the current code. If the device turns back on, press the **ENTER** key. If the device does not turn on, return to step 6.
- Continue with auto-search function** – Press the **PLAY** key on the remote to continue with the auto-search function. Then, return to step 6.

Auto-Searching the Code Library for AUX Mode Codes (Program Code 922)

- Turn on the device that you want to assign to the AUX key.
- Point the remote at the device.
- Press and *while holding* the **AUX** key, press the **OK** key.
- Release *both* the **AUX** key and the **OK** key and all the mode keys blink twice.
- Enter the programming code **9 2 2** by pressing the numeric keys on the remote. The **AUX** key blinks twice indicating a successful entry.
- Press the **PLAY** key, choose one of the following device categories and then, using the number keys on the remote, press its assigned number (1 – 4) based on the following list:

- 1 = VCRs
- 2 = Receiver/Tuners
- 3 = Amplifiers
- 4 = HTIB

Note: The device categories are number-coded to provide a more direct programming method.

7. Point the remote toward the device, and press **PLAY**.

8. Your device powers off when it finds the correct code. Then, choose one of the following options:

- Save code and exit** – Press the **ENTER** key on the remote to program the code in the remote and the mode key flashes three times indicating successful entry.
- Step forward** – Press the fast-forward (**FF**) key on the remote to step ahead through the codes one at a time. Then, return to step 7.
- Step backward** – Press the rewind (**REW**) key on the remote to step back through the codes one at a time. Then, return to step 7.
- Exit without saving the code** – Press the **EXIT** key on the remote. The selected mode key flashes three times and returns to normal operation.
- Send the current code** – Press the **POWER** key on the remote to send the current code. If the device turns back on, press the **ENTER** key. If the device does not turn on, return to step 7.
- Continue with auto-search function** – Press the **PLAY** key on the remote to continue with the auto-search function. Then, return to step 7.

Reassign Mode Keys

You can reassign a mode key to operate a different device. For example, you can reassign the **AUX** key to operate a DVD player or a TV. If you reassign a key, be sure you update the table found in this guide.

Reassigning Mode Keys (Program Code 944)

- Press and hold the **STB** mode key on the remote.
- Without releasing the **STB** key, press and hold the **OK** key.
- Release *both* the keys and all mode keys flash twice.
- Enter the programming code **9 4 4** by pressing the numeric keys on the remote. The **STB** mode key blinks twice indicating a successful entry.
- Press and release the mode key associated with the type of device you want to control, and then press and release the mode key that you want to change. The newly assigned mode key blinks one time indicating a successful entry.

LED Indicators

There are red LEDs underneath each of the four mode keys (**STB**, **TV**, **DVD**, and **AUX**) that flash each time a key is pressed to show which device the key is currently controlling.

There are also green LEDs that illuminate several keys whenever the remote is in use. They stay illuminated for a short time after a key is pressed.

During programming, if the remote times out before you complete the code setup, you will need to start over. This is indicated by one long flash of the red LED.

What Devices Do I Want to Control?

To help you keep track of the devices you want to control, list the type of devices you have (including brand) in the following table. Then, use the code tables at the end of this guide to locate the codes for your device. For example, look under **TV Group** if you need to program the remote to operate your TV. If you have two devices that use the same key, you must reassign the TV, DVD, or the **AUX** key. The **STB** key cannot be reassigned. Go to **Reassign Mode Keys**. Otherwise, go to **Program the Remote to Control My Devices** for additional instructions.

Mode Key	Device Type	Brand	Code
<i>Example:</i> DVD	DVD	Sony	2066
TV			
DVD			
AUX			

What Devices Can I Control?

The four **mode keys** arched across the top of the remote tell the remote which device you want to operate.




Each mode key is associated with different types of devices. You can use each mode key to control one of its associated devices:

Mode Key	Associated Devices
STB	IP gateway set-top
TV*	TVs (including HDTVs)
DVD*	DVD players
AUX*	VCRs, receivers, tuners, and Home Theater in a Box (HTIB)

* These keys can be reassigned to control different devices. Go to the **Reassign Mode Keys** section of this guide for instructions.

Quick Reference

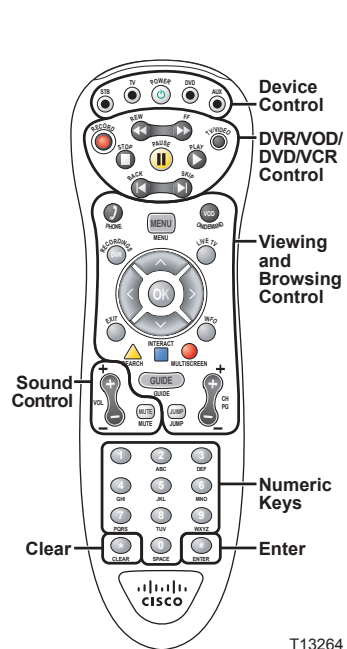

Device Control

- POWER** Turns devices on or off
- STB** Enables set-top mode functions
- TV** Enables TV mode functions
- DVD** Enables DVD mode functions
- AUX** Enables AUX mode functions

DVR, VOD, DVD, VCR Control

Notes:

- In **STB** mode, these keys control DVR and VOD functions.
- In **DVD** and **AUX** modes, these keys may control your DVD or VCR depending on how you have programmed the remote.

- RECORD** Records the selected program
- STOP** Stops DVD, VCR, VOD, or DVR content
- PAUSE** Pauses DVD, VCR, VOD, or DVR content
- PLAY** Plays DVD, VCR, VOD, or DVR content
- VIDEO** Scrolls through available TV or video input sources

- REW** / **FF** Rewinds or fast forwards through DVR or VOD content

- BACK** / **SKIP** Skips backward or forward through DVR or VOD content

Viewing and Browsing Control

- PHONE** Accesses the phone menu
- MENU** Accesses the Interactive Program Guide (IPG)
- ON DEMAND** Accesses the On Demand menu
- RECORDING** Accesses the DVR list of recordings
- LIVE TV** Views live TV
- MOVES** Moves through selections
- OK** Selects and deselects screen items
- SAT** Clears all menu screens and returns to broadcast TV
- SEARCH** Accesses the Search menu
- INTERACT** Accesses INTERACT content (Internet and interactive content)
- MULTISCREEN** Turns MultiScreen mode on or off
- INFO** Displays text information about the selected program
- GUIDE** Displays or closes the IPG
- JUMP** Jumps to next section or switches to last channel viewed
- SELECT** Selects the next channel, up or down, when watching TV. Moves up or down one page in the IPG and in some menu screens

Put It Back the Way I Got It

You can return all advanced functions back to their original settings by resetting the remote to factory default settings. Resetting the remote to factory default settings removes all of the programming you have entered for the remote. You must reprogram the remote to restore your original settings.

Resetting the Remote to Factory Default Settings (Program Code 900)

- Press and hold the **STB** mode key on the remote.
- Without releasing the **STB** key, press and hold the **OK** key.
- Release *both* keys and all mode keys blink twice.
- Enter the programming code **9 0 0** by pressing the numeric keys on the remote. The STB mode key blinks four times to indicate you have successfully reset the remote to factory default settings.

Notes:

- If any other key is pressed except the numeric keys, the remote does not accept any changes or updates. The STB mode key displays a long red flash and the remote returns to normal operation.
- If the remote times out before you complete the factory default reset procedure, the remote does not accept any changes. You must start over from step 1 of this procedure.

Troubleshooting

If there is no response when you press the keys on the remote, please check the following items before calling for service.

Check the Batteries

- Are the batteries inserted correctly?
- Check the battery condition for leakage.
- Replace with new alkaline batteries.

Check the Device

- Is the device's power cord connected to the power outlet?

- Is the device switched on?

Check the IR Database Codes List

Is the device brand name for the device listed in the code list?

- If **yes** and there is more than one code listed, try using a different code to provide more functionality.
- If **no**, try the following:
 - Use the Auto-Search function to find a usable code.
 - If the Auto-Search function is unable to find a usable code, you may need to use the original remote provided with the device.

Code Tables

If the remote does not recognize your device, you can find codes for your device by brand name. Code tables in this section are organized by the devices assigned to each mode (TV, DVD, and AUX).

TV Mode Group

TV

Abex	1098
Admiral	1001, 1099
Advent	1005, 1053, 1110, 1113
Adventura	1004
Aiko	1015
Aiwa	1004
Akal	1002, 1427
Allison	1044
Amtron	1038
Anam National	1003, 1036
AOC	1004, 1005
Apex	1111, 1119, 1163, 1256
Audiovox	1036
Bang & Olufsen	1453
Belcor	1004
Bell & Howell	1001, 1045
Benq	1042
Bradford	1036
Broksonic	1114, 1121, 1382, 1383
Brokaw	1004
Candle	1004, 1007, 1100
Celebrity	1002
Citizen	1004, 1007, 1015, 1036, 1073, 1097, 1100
Colorfyme	1004
Concerto	1004
Contec/Cony	1011, 1012, 1036
Craig	1036
Crosley	1000, 1053
Crown	1036, 1053
CXTX	1257
Curtis Mathes	1000, 1004, 1014, 1045, 1073, 1097, 1385
CXC	1036
Cytron	1456
Daewoo	1004, 1005, 1013, 1015, 1016, 1097, 1106,1258, 1362, 1368, 1369
Daytron	1004, 1097
Diamond/Vision	1461
Dimensia	1000
Dumont	1160
Durabrand	1259

Dynatech	1004
Electroband	1002
Electrohome	1002, 1003, 1004,1018, 1021
Emerson	1004, 1011, 1013, 1025, 1028, 1031, 1033, 1036, 1044, 1045, 1080, 1097, 1101, 1102, 1107, 1382, 1383
Envision	1004
Fisher	1043, 1045, 1047, 1103
Fujitsu	1044, 1029
Funai	1036, 1044, 1384
Futuretec	1036
Gateway	1038
GE	1000, 1003, 1004, 1008, 1021, 1048, 1049, 1063, 1068, 1094, 1144, 1164, 1224, 1367, 1380, 1381, 1385, 1386

Gibraltier	1180
Goldstar	1004, 1005, 1011, 1018, 1050, 1090, 1091, 1097, 1098, 1400, 1401
Grundy	1036, 1044
Hallmark	1004
Harley Davidson	1384
Harvard	1036
Hisense	1112
Hitachi	1004, 1011, 1012, 1051, 1052, 1084, 1085, 1086, 1087, 1102, 1225, 1384

HP	1408
Ilo	1457
IMA	1036
Infinity	1053
Janel	1100
JBL	1053
JC Penney	1000, 1004, 1005, 1007, 1012, 1021, 1048, 1049, 1058, 1063, 1068, 1072, 1073, 1075, 1097, 1098
JCB	1002
Jensen	1004, 1232, 1285, 1314, 1376
JVC	1011, 1012, 1028, 1049, 1052, 1054, 1055, 1080, 1092, 1117, 1131, 1235, 1288, 1299
Kawasho	1002, 1004
Kenwood	1004, 1018
Kloss Novabeam	1036, 1056, 1057, 1100
KTV	1036, 1097, 1101
LG	1005, 1396, 1397, 1398, 1399, 1402, 1403, 1404, 1405
Lloyd's	1384
Loewe	1053
Lugk	1001
Luxman	1004
LXI	1000, 1004, 1045, 1053, 1058, 1068, 1075
Magnavox	1004, 1007, 1018, 1053, 1056, 1057, 1059, 1060, 1083, 1110, 1147, 1228, 1260, 1300, 1301, 1302, 1321, 1326, 1339, 1365, 1386, 1371, 1384, 1387

Magnin	1380
Majestic	1001
Marantz	1004, 1051, 1053
Media Center	1408
Megaltron	1004, 1051
Memorex	1001, 1004, 1005, 1022, 1045
MGA	1004, 1005, 1018, 1021, 1047, 1061, 1062, 1360
Midland	1049, 1068, 1097, 1098, 1160
Minutst	1048
Mitsubishi	1004, 1005, 1018, 1021, 1047, 1061, 1062, 1081, 1381
Montgomery Ward	1001
Motorola	1003, 1099
MTC	1004, 1005, 1073
Multitech	1036
NAD	1004, 1058, 1075, 1085
NEC	1003, 1004, 1005
Net-TV	1040
Olevia	1420
Nikko	1004, 1015
Norcent	1217, 1320
NTC	1015
Orwa	1036
Optimus	1085
Optonica	1064, 1099
Opticon	1023, 1033, 110, 1382, 1383

Panasonic	1003, 1010, 1048, 1053, 1056, 1123, 1152, 1231, 1289, 1292, 1295, 1303, 1304, 1305, 1306, 1385
Penney	1380, 1385
Philco	1003, 1004, 1005, 1007, 1011, 1018, 1053, 1056, 1057, 1059

Philips	1003, 1004, 1007, 1011, 1017, 1018, 1053, 1056, 1057, 1059, 1060, 1063, 1110, 1126, 1129, 1148, 1155, 1238, 1263, 1264, 1265, 1290, 1291, 1307, 1308, 1309, 1337, 1389
---------	--

Philips Magnavox	1260, 1264, 1265, 1266
Pilot	1097
Pioneer	1004, 1085, 1102
Polairaid	1285, 1458
Portland	1004, 1005, 1015, 1097
Price Club	1073
Prima	1113
Prism	1049
Proscan	1000, 1008, 1068, 1108
Proton	1004,1011
Pulsar	1160
Pulsar	1004
Quasar	1003, 1039, 1048, 1096, 1165, 1166, 1385
Radio Shack/Realistic	1000, 1004, 1011, 1036, 1045, 1064, 1097, 1098, 1384

RCA	1000, 1003, 1004, 1005, 1008, 1018, 1048, 1049, 1065, 1066, 1067, 1068, 1069, 1070, 1071, 1082, 1102, 1104, 1108, 1108, 1115, 1151, 1162, 1167, 1168, 1268, 1269, 1270, 1271, 1310, 1355, 1359, 1361, 1370, 1373, 1379, 1380, 1381, 1385, 1386
Runco	1160
Sampo	1004, 1097, 1098, 1120
Samsung	1004, 1005, 1011, 1014, 1018, 1019, 1072, 1073, 1074, 1097, 1098, 1156, 1161, 1297, 1323, 1360, 1363, 1364
Sansui	1023, 1107, 1122, 1273, 1382, 1383, 1384
Sanyo	1045, 1062, 1095, 1103, 1380
Scotch	1004
Scott	1004, 1011, 1033, 1036, 1044
Sears	1000, 1004, 1012, 1018, 1044, 1045, 1047, 1055, 1058, 1068, 1075, 1076, 1103, 1105, 1384
Sharp	1004, 1009, 1011, 1025, 1064, 1077, 1078, 1097, 1099, 1153, 1157, 1274, 1298, 1311, 1312, 1362, 1375, 1378
Shogun	1004
Signature	1001
Simpson	1007
Sony	1002, 1109, 1137, 1201, 1202, 1249, 1272, 1275, 1276, 1277, 1278, 1317, 1356, 1374, 1384, 1388

Soundsign	1004, 1007, 1036, 1044
Squareview	1105
SSS	1036
Starfile	1036
Supra-Miacy	1100
Supreme	1002

Sylvania	1004, 1007, 1018, 1027, 1153, 1056, 1057, 1059, 1060, 1124, 1150, 1145, 1279, 1296, 1387, 1464
Symphonic	1024, 1031, 1036, 1105, 1280, 1384
Tandy	1099
Tashiko	1058
Tatung	1003
Technics	1049
Techwood	1004, 1049
Teknika	1001, 1004, 1005, 1007, 1111, 1012, 1015, 1036, 1044, 1060, 1073, 1096, 1097
Tera	1004, 1011
Thomas	1384
TMK	1004
Toshiba	1006, 1045, 1058, 1073, 1175, 1079, 1093, 1116, 1154, 1158, 1159, 1262, 1267, 1281, 1282, 1283, 1284, 1286, 1293, 1294, 1313, 1315, 1319, 1338, 1364, 1377
Television	1097
Universal	1048, 1063
Victor	1055
Vidtech	1004, 1005
Viking	1100
Wards	1000, 1001, 1004, 1005, 1118, 1031, 1044, 1048, 1053, 1056, 1057, 1059, 1060, 1063, 1064
Westinghouse	1013
Yamaha	1004, 1005, 1018
Zenith	1001, 1089, 1118, 1125, 1161, 1287, 1357, 1382, 1383, 1384

HDTV

Acer	1041, 1192
Akal	1427, 1432
Apex	1088
Astar	1434
Lasonic	2081
Audiovox	1455
Axion	1459
Benq	1136
Coby	1460
Daewoo	1135
Dell	1141, 1142, 1146, 1394, 1395, 1409
Element	1431
Emerson	1468
Emprex	1438
Epson	1422, 1451
Fujitsu	1029
Gateway	1038, 1449
Hewlett Packard	1419, 1444, 1445, 1452
Hitachi	1030, 1132, 1133, 1134, 1191, 1208, 1209, 1210, 1211, 1221, 1226, 1322, 1324, 1328, 1344, 1447
HP	1419, 1445, 1452
Ilo	1412, 1435, 1436
InfFocus	1450
Initial	1457
Insignia	1437
JVC	1130, 1131, 1227
LG	1343, 1346, 1396
Magnavox	1329, 1358, 1372, 1414
Maxent	1424
Mintek	1457
Mitsubishi	1032, 1213, 1229, 1230, 1448
NEC	1193, 1423
NET-TV	1040
Olevia	1406, 1418, 1421, 1462
Panasonic	1140, 1169, 1170, 1194, 1123, 1234, 1331, 1336, 1410, 1417, 1442, 1468

Philips	1126, 1129, 1236, 1237, 1239, 1261, 1334, 1351, 1390, 1411
Pioneer	1025, 1195, 1240, 1335, 1469, 1470
Polairaid	1282, 1391, 1392, 1393, 1396, 1431, 1440
Proscan	1000
Protron	1430
Proview	1407
RCA	1143, 1196, 1241, 1242
Sampo	1038, 1243
Samsung	1019, 1171, 1172, 1173, 1174, 1175, 1197, 1198, 1199, 1200, 1245, 1246, 1325, 1327, 1352, 1354, 1443

Sceptre	1467
Scott	1428
Sharp	1138, 1176, 1177, 1214, 1244, 1247, 1248, 1348, 1350, 1415, 1416
Sony	1037, 1128, 1137, 1178, 1215, 1216, 1218, 1219, 1220, 1221, 1250, 1251, 1316, 1318, 1330, 1347, 1413
Sony	1446
Sylvania	1046, 1465
Syntax	1418
Syntax-Brilliant	1418
Tatung	1426
Toshiba	1147, 1179, 1203, 1204, 1222, 1223, 1332, 1340, 1341, 1325, 1373
Trutech	1425
Viewsonic	1038, 1149, 1180, 1181, 1182, 1183, 1184, 1185, 1186, 1187, 1188, 1189, 1190, 1205, 1206, 1441
Viore	1435
Vizio	1429, 1433, 1439
Westinghouse	1454
Zenith	1020, 1139, 1207, 1253, 1255, 1333, 1342, 1349

DVD Mode Group

DVD

Aiwa	2026, 2131
Akal	2378
Amplion	2342
MediaWorks	2342
AMW	2342
Apex	2001, 2056, 2057, 2061, 2095, 2098, 2229, 2250, 2316, 2322, 2330
Apex Digital	2261, 2262, 2263, 2266, 2269, 2291
Argo	2325
Aristo	2354
Audiovox	2132, 2373, 2388
Axion	2379
Bang & Olufsen	2324, 2370
Blaupunkt	2136, 2322
Bose	2122, 2130, 2215
Boss	2336
Broksonic	2053, 2072, 2284
Cambridge SoundWorks	2395
Cinevision	2152, 2195
Clarion	6012
Classic	2101, 2391
Coby	2380, 2387
Curtis	2387

DVD, continued

CyberHome	2083, 2325
Cytron	2374
Daewoo	2058, 2062, 2137, 2138, 2190
Denon	2110, 2133, 2040, 2216, 2247, 2253, 2317
Desay	2344
Diamond/Vision	2382
Disney	2321
Durabrand	2326
Eclipae	2335
Emerson	2002, 2059, 2073, 2321, 2327, 2392
ESA	2327, 2394
Fisher	2112, 2134, 2255
Funai	2002, 2321, 2327
Gateway	2346
GE	2079, 2118, 2041, 2261, 2272, 2319, 2322
Go Video	2046, 2127, 2129, 2124, 2230, 2239, 2249, 2346
GPX	2114, 2390
Greenhill	2322
Grundig	2320
Harman Kardon	2125

Hitachi	2000, 2027, 2126, 2173, 2240
Ilo	2375
Initial	2322, 2381
Insignia	2327, 2369, 2394
Imradio	2149, 2156
JVC	2017, 2028, 2047, 2090, 2096, 2097, 2115, 2168, 2204, 2206, 2217, 2218, 2232, 2242, 2265, 2277, 2283, 2359, 2360, 2361, 2362, 2364, 2365, 2366, 2367